ARAT Navigation mount

Car Manufacturer: MERCEDES

TYPE: W170, SLK (roadster)

Part No: NS1244

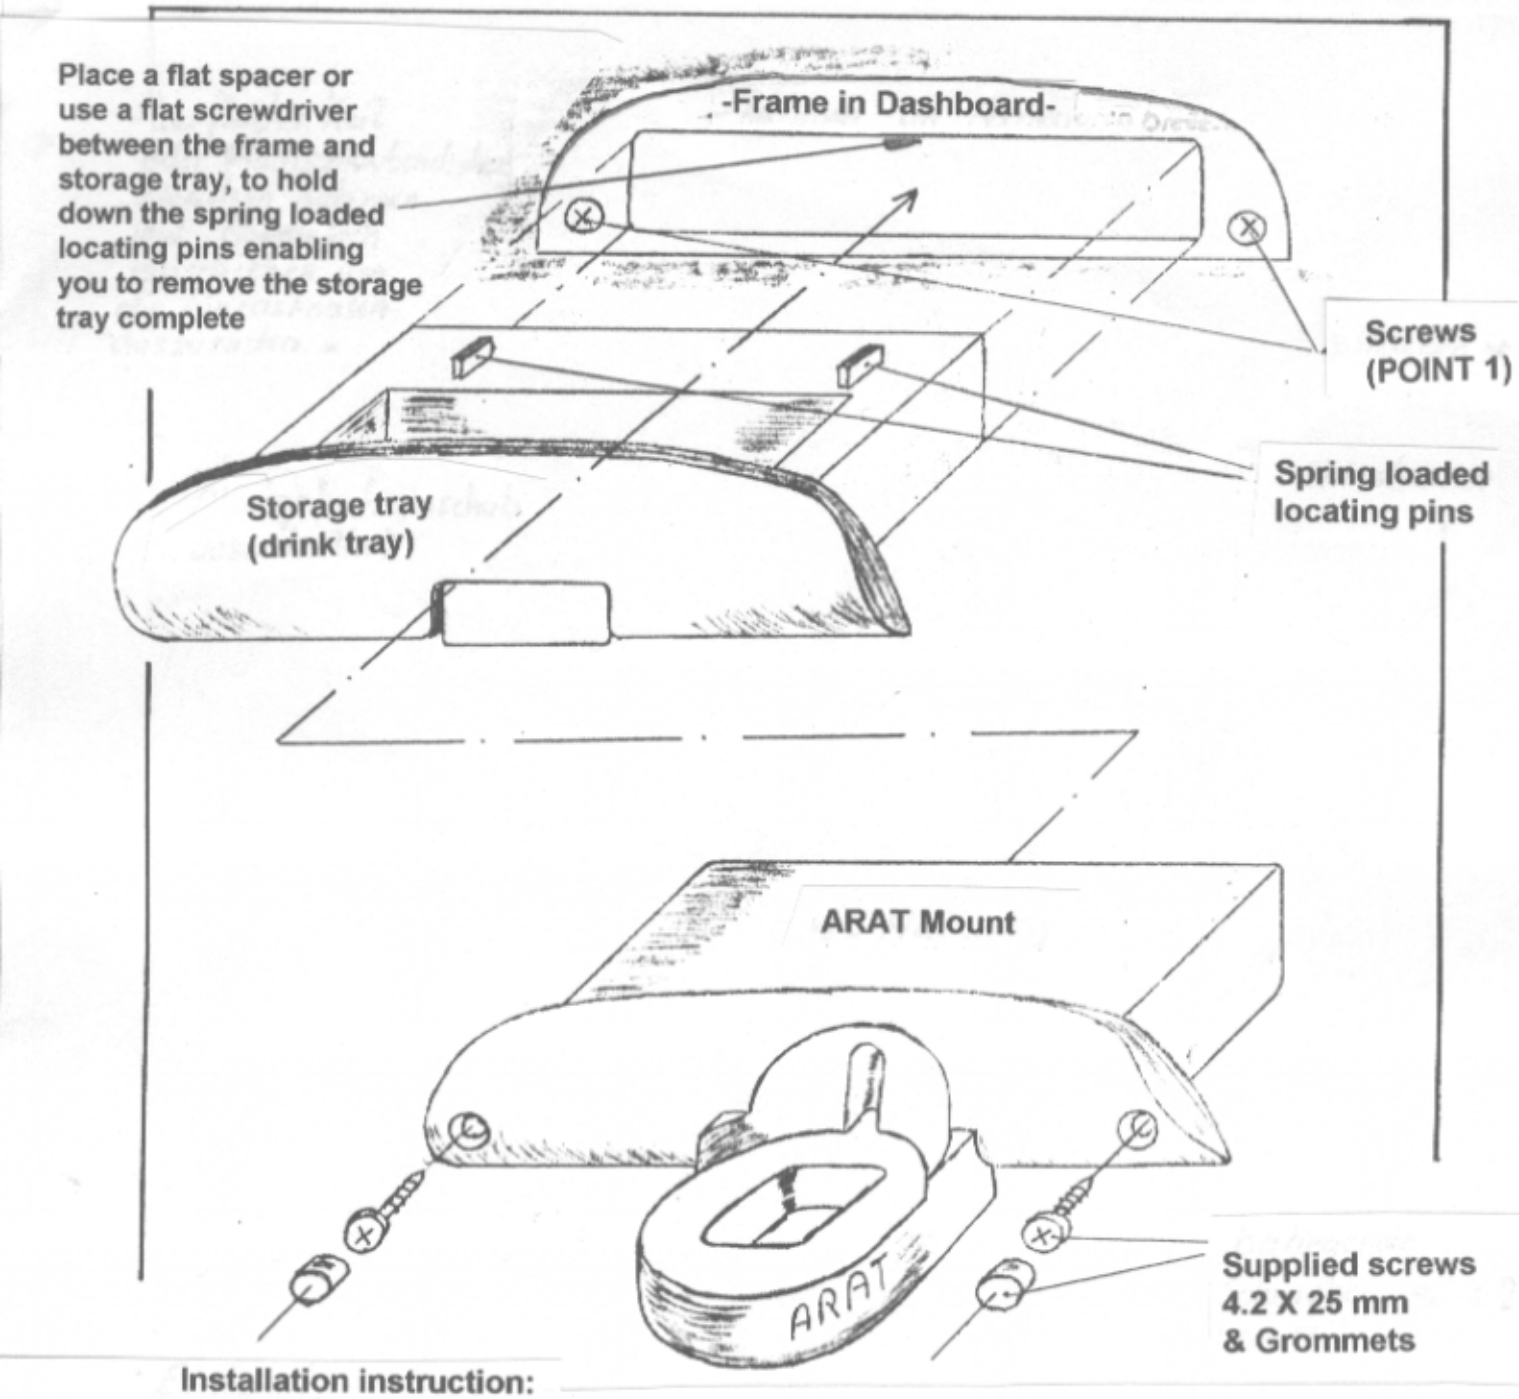
Place a flat spacer or use a flat screwdriver between the frame and storage tray, to hold down the spring loaded locating pins enabling you to remove the storage tray complete
-Frame in Dashboard-
Screws (POINT 1)
Spring loaded locating pins
Storage tray (drink tray)
ARAT Mount
ARAT
Supplied screws 4.2 X 25 mm & Grommets

Installation instruction:

1. Remove (pull) the storage tray from the dashboard, & remove the two (2) screws at POINT 1
2. Place the ARAT mount in the opening and secure the mount with the supplied screws, and cover the screw heads with the supplied grommets
3. Place the cable of the screen through the channel in the mount
4. You can now secure your display monitor screen onto the flat face of the ARAT mount.